

# User Instructions for GaugeMaster™


The GaugeMaster™ is a digital air pressure gauge for instantly measuring the air pressure available at the tip of a PrepMaster® connector.

The GaugeMaster™ is used to determine the supply air pressure to the PrepMaster® instrument via the PrepMaster® connector.


It works with both Handpiece (HP) and Quick Disconnect (QD) air supply connections to provide accurate pressure readings.



**Step 1:** Install the PrepMaster® connector per instructions provided for HP & QD adapters.

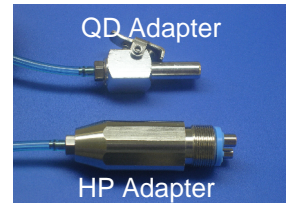


**Step 2:** Verify that air pressure is available at the tip of the PrepMaster® connector by depressing the safety shut-off valve at the tip of the PrepMaster® connector to release air.

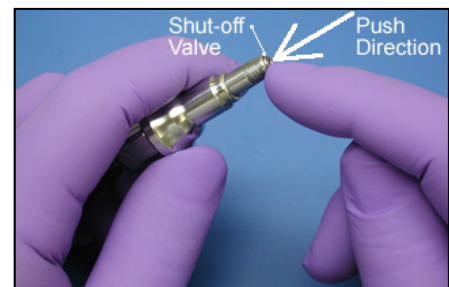

**Step 3:**

- Hold the GaugeMaster™ in one hand and the PrepMaster® connector in the other.
- Push the GaugeMaster™ onto the tip of the PrepMaster® connector.
- Hold until reading is locks on the display. (Note: To assure proper reading, make sure no escaping air is heard during this step.)

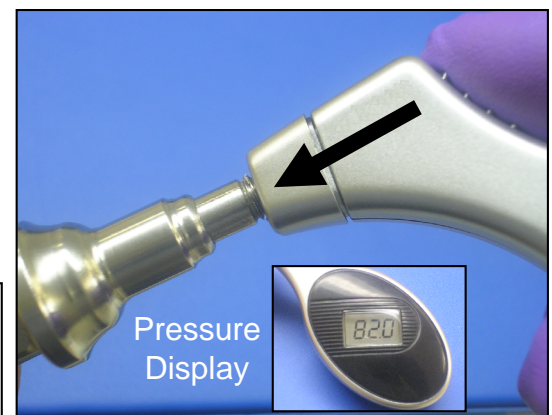

**Notes:**

- The GaugeMaster™ display remains off until pressure is applied to the gauge.
- The GaugeMaster™ will shut off automatically.
- The batteries are sealed within the GaugeMaster™ and will last for a period of 5 years.